Service Data													
No.	Items To Check		Service	Qty.	Service Interval (hr)								
					10	50	250	500	1000	1500	2000	4500	
1	Front Joint Pin		Grease	4	F100	W10							
2	Articulation Pin		Grease	2	F100	W10							
3	Rear Axle Pivot		Grease	3	F100	W10							
4	Steering Cylinder		Grease	4									
5	Front Joint Pin		Grease	9	F100		W10						
6	Front Driveshaft Bearing		Grease	1									
7	Center Propeller Shaft		Grease	1									
8	Engine Oil Pan		Engine Oil <sup>(1)</sup>	32 L	V								
9	Water Separator		Cartridge	1	V								
10	Air Compressor Filter		Element	1				C					
11	Engine Oil Filter		Cartridge	1									
12	Fan, Brake and Pilot Filter		Element	1									
13	Air Conditioner Filter	Outer	Cartridge	1		С		C					
14	Transmission		Transmission Oil <sup>(1)</sup>	42 L	V		F						
15	Transmission Filter		Cartridge	1			F						
16	Full Flow Filter		Element	1			F						
17	Fuel Filter		Cartridge	1									
18	Air Breather Filter		Element	1									
19	Fuel Cap Filter		Element	1									
20	Front Axle	DL300-5	Axle Gear Oil	35 L				F					
20		DL350-5		40 L									
21	Rear Axle	DL300-5	Axle Gear Oil	35 L				F					
۱ ک		DL350-5		40 L									
22	Hydraulic Oil Tank	DL300-5	Hydraulic Oil	111 L	V								
		DL350-5		124 L	V								
23	Radiator		Coolant (Antifreeze)	40.5 L	V								
0.4	Air Cleaner	Outer	Element	1				С					
24		Inner	Element	1									
25	DEF (AdBlue) Filter		Element	1									

V: Maintenance and Refill.

C: Cleaning.

**F**: First Time Exchange Only.

F100: Every 10 Hours for First 100 Hours.

W10: Every 10 Hours If Operating In Water.

: Replacement On Every Interval

**NOTE:** For additional service items see list of "Maintenance Intervals" on page 4-35.

**NOTE:** This capacity may include the tank (reservoir), lines, pipes and components and attachment.

Observe all sight gauge and level indicators in order to ensure that the systems and compartment are refilled to the proper level.

Service Data												
No.	Items To Check	Service	Qty.	Service Interval (hr)								
140.	items to check			10	50	250	500	1000	1500	2000	4500	
26	Fuel Tank	Diesel	241 L	V	D							
27	Hydraulic Oil Sampling	Hydraulic Oil					V					
28	Oil Suction Filter	Element	2							C		
29	DEF (AdBlue) Tank	DEF	60 L	V	Refill urea when urea level light turns on							
30	Turbo Precleaner	Case	1	Check frequently and then clean with air								

V: Maintenance and Refill.

C: Cleaning.

**F**: First Time Exchange Only.

F100: Every 10 Hours for First 100 Hours.

W10: Every 10 Hours If Operating In Water.

: Replacement On Every Interval

**NOTE:** For additional service items see list of "Maintenance Intervals" on page 4-35.

**NOTE:** This capacity may include the tank (reservoir), lines, pipes and components and attachment.

Observe all sight gauge and level indicators in order to ensure that the systems and compartment are refilled to the proper level.